


Installation Procedure

WARNING ⚡

1. Switch off power supply before installation / maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.

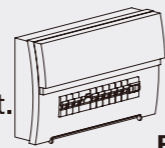

Turn Off
Power Supply

Rotating surface mounted installation

