

Installation Procedure


WARNING

1. Switch off power supply before installation / maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.



**Turn Off
Power Supply**

Downlight with external driver (AB)

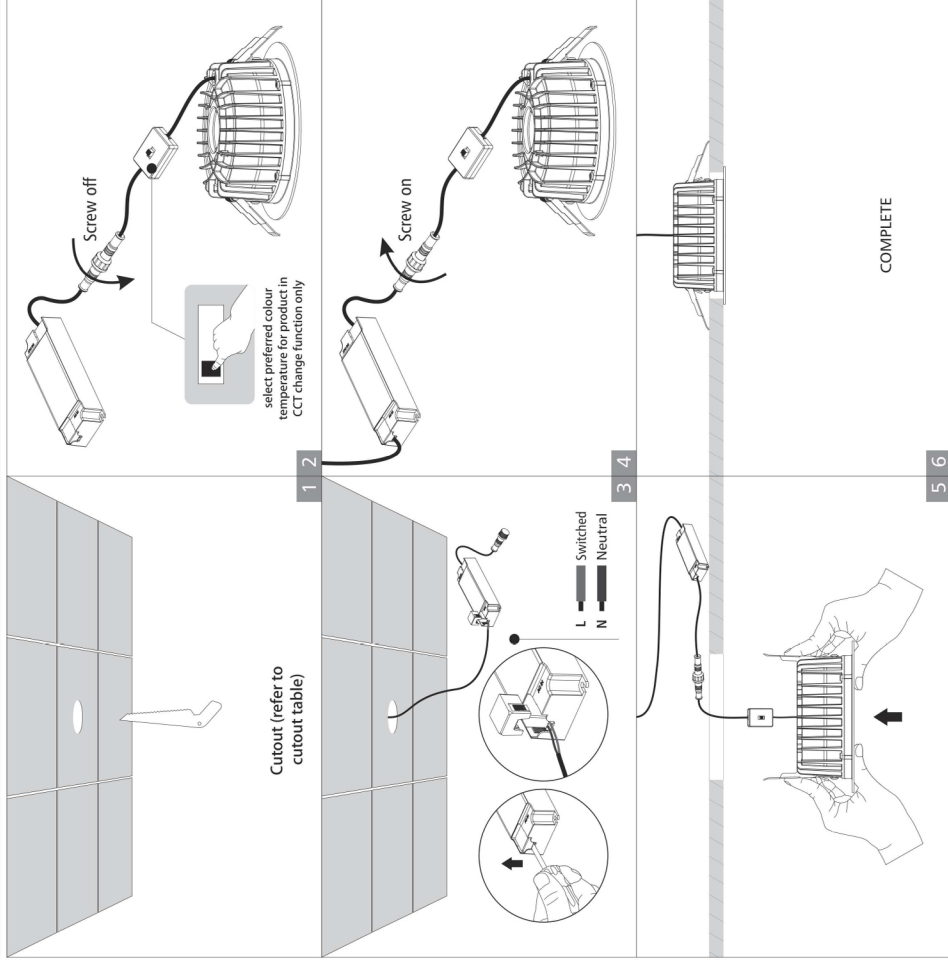

Downlight with external driver (C)

