

Installation Procedure


WARNING

1. Switch off power supply before installation / maintenance.
2. Switch on only after complete installation and examination of the circuit.
3. Professional electrician for installation and maintenance only.



Turn Off
Power Supply

Downlight with external driver (AB)

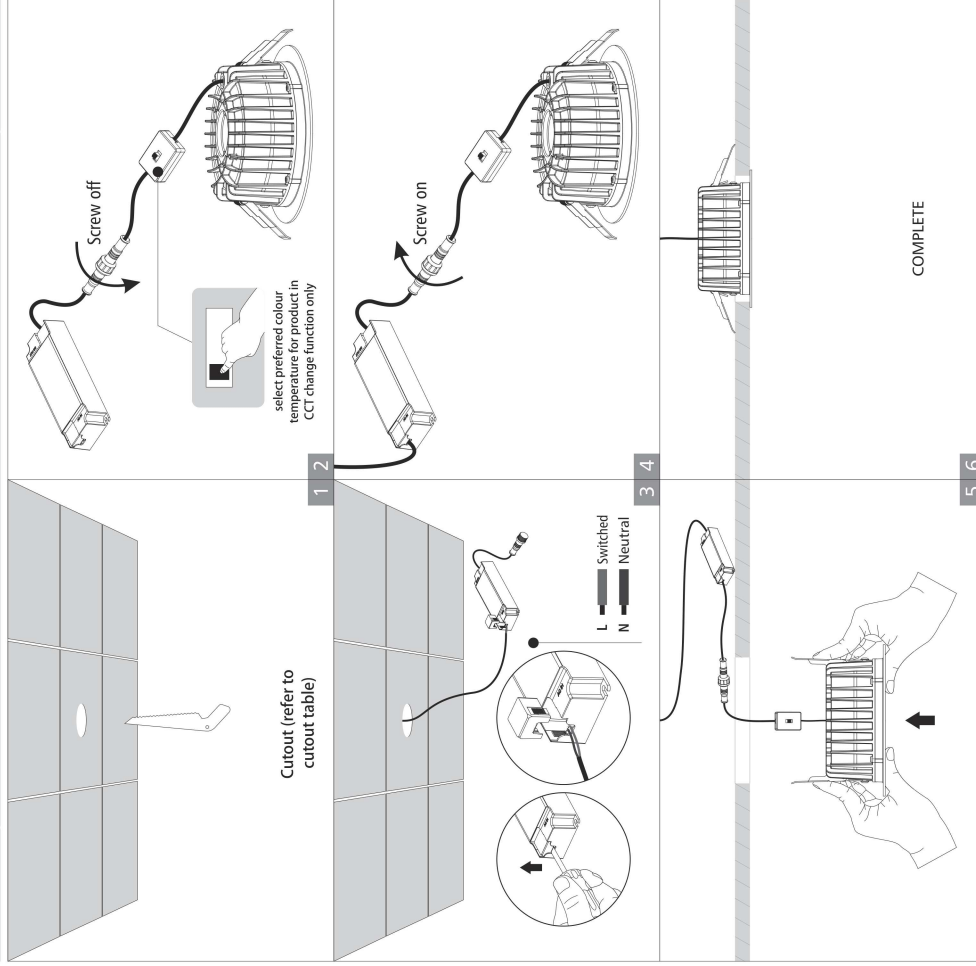

Downlight with external driver (C)

